


PRODUCT DESCRIPTION:

The LED street light is suitable for many locations such as parking lots, streets or roads, driveways, area lighting, municipal areas, commercial areas, security or showcase lighting.

# **FEATURES:**

- 10KV
- IP67 weather-proof rated
- Aero-space grade, die-cast aluminum housing
- · Corrosion resistant coat finish
- 0-10V dimmable driver
- Built in heat sink
- Driver on board

# **DIMENSIONS:**

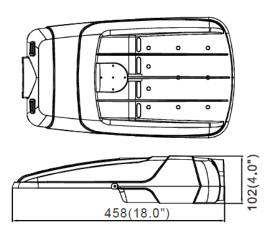



Page: 1 of 2

# **LED Street Light 50W Spec**

LOD-HLSA-T250WD50K-V2





# **LED Street Light 50W Spec**

Page: 2 of 2

# **SPECIFICATIONS:**

SPECIFICATION	Details	
Model	LOD-HLSA-T250WD50K-V2	
Input Wattage (W)	50W	
Lumens Delivered (LM)	6,000LM	
Efficacy (LM/W)	120LM/W	
CRI	70	
Lifespan	50,000hrs	
Color Temperature	5,000K	
Wattage Equivalent	100W	
Dimmable	Yes	
IP Rating	IP67	
Beam Angle	120	
Input Voltage	AC120-277V	
Power Factor	0.99	
THD	15%	
Housing	Die Cast Aluminum Housing	
Lens	Clear	
Mounting	Bracket Mount	
Weight (LBS)	6.2lbs	
Size	18.0" x 10.2" x 4.0"	
Certification	DLC, UL, FCC, CE, RoHS	
Operating Temperature	-40-50℃	
Warranty	5 years limited	

Special Order: 3,000K 4,000K 5,700K



















# Installation Instructions


#### IMPORTANT SAFEGUARDS


When using electrical equipment, basic safety precautions should always be followed including the following:


## READ AND FOLLOW ALL SAFETY INSTRUCTIONS


- To reduce the risk of electrical shock, turn off power supply before installation or servicing.
- This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electricism.
- If NEMA photo control is installed refer to NEMA Receptacle section for instructions.
- 4. Verify the availability of necessary tools and incidental material.


#### TO INSTALL:

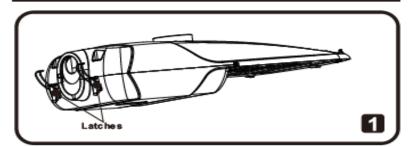

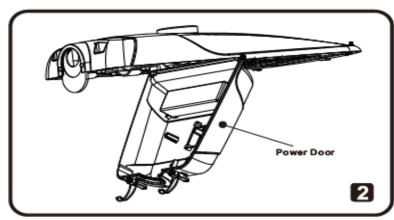

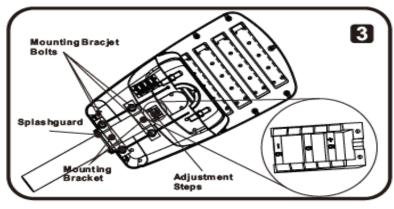

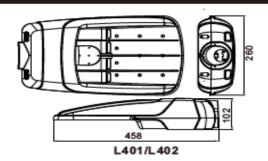

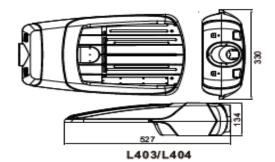

# **LUMINAIRE INSTALLATION**

## STEP 1

Unfasten the stainless steel latches. See Figure 1.

## STEP 2:

Open the power door. Power door will securely hang. See **Figure 2.** 

## STEP 3:

Slide fixture on to pole through opening on the rear of housing and through splashguard. See **Figure 3.** 


## STEP 4

To level fixture, use bubble level located inside housing. Adjust leveling of fixture from side to side. To level from front to back, slide pole to different step in upper housing. Each step changes the angle in 2.5° degree increments. See **Figure 3.** 

Tilt: Stopping at the step marked "0" provides no tilt. Stopping at the step marked "+5" provides maximum tilt.



TORQUE VALUES				
Pipe Pipe Size	Pipe Position	Bolt Torque Required (in-lbs)	Bolt Torque Required (N-m)	
1-3/4 IN O.D. (44.45mm)	+5.0 de grees tilt	200	22	
	+2.5 degre es tilt	200	22	
	0 degrees (no tilt)	200	22	
	-2.5 de grees tit	200	22	
	-5.0 degre es tilt	200	22	
2-3/4 IN O.D. (60.3mm)	+5.0 de grees tilt	200	22	
	+2.5 degre es tilt	200	22	
	0 degrees (no tilt)	200	22	
	-2.5 degrees tilt	200	22	
	-5.0 degre es tilt	200	22	

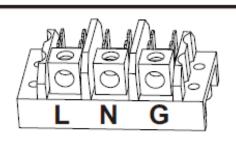

Make the following Electrical Connections to the terminal block: 1. For 120/277V/347/480 connect the black fixture lead to the

- voltage supply position of the terminal block.

  2. For 120/277V/347/480 connect the white fixture lead to the neutral supply position of the terminal block.
- neutral supply position of the terminal block.

  3. Connect the green or green/yellow ground lead to the green wire position of the terminal block.
- 4. If Dimming is an option; connect the violet dimming
- positive lead to the supply dimming positive lead.
  5. If Dimming is an option; connect the grey dimming negative lead to the supply dimming negative lead



# STEP 5:

Once desired position is achieved, tighten mounting bolts to the appropriate torque values specified in TORQUE VALUES table to the left.

IMPORTANT: DO NOT exceed these torque levels on the mount bolts. Exceeding recommended torque value resulting in excessive deformation of mounting bracket will causes tripping of mount hardware which could lead to an unsafe mounting condition.

#### STEP 6

Reference Electrical Connections section for completing electrical connections. See **Figure 4.** 

## Step 7:

4

Close the housing cover and fasten the two stainless steel latches. See Figure 5.

# Step 8:

If luminaire is furnished with photocontrol receptacle, install the photocontrol or shorting. See **Figure 6**.

