

## **ProLED**. SekTor Area Installation Instructions




### Cautions:

- 1. Can not use the electric generator to test the LED lamp.
- 2. Please abide by related country, regional and local law and regulationswhen install this fixture.
- 3. To avoid electrical shock and damage, please do not install the lights inraining days.

#### Notices:

- 1. To prevent from electric shock or fire risk, the installation must be conducted by operator who have professional electrical knowledge.
- 2. Please wear gloves to avoid injury before installing lamps.
- 3. During or after installation, if there are situations such as smoke, fire in the wires or lamps, please turn off the power immediately and notify relevant personnel of an overhaul.
- 4. This light can be used for outdoor installation.
- 5.Do not install in a hazardous environment. The ambient temperature must not exceed the rated operating temperature of the product.
- 6.Do not install the product when it rains. Avoid the danger of lightning strikes and avoid accidents
- 7. External 0-10V only passive dimmers are supported.

### Wiring Diagram:

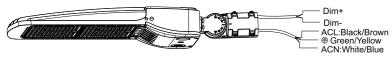


Notice: Please use the dimming+, dimming- (DC10V) marking leads to connect to outside dimmer.

Please assure a cumulative leakage current of less than 3.5mA on the control circuit.

The AUX control wire with shrinkable tubing shall not be damaged (no connection).

### Optional Brackets and Installation Instructions:

There are 6 optional brackets for this fixture. The following is street light fixtures with different brackets

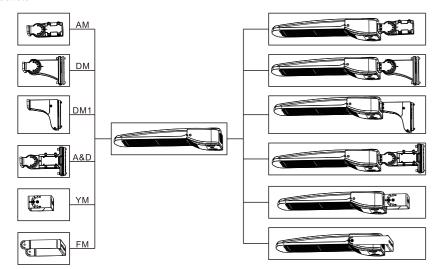

-1-

### Installation Instructions with different brackets:

### 1. Round ADJUSTABLE FITTER MOUNTING (AM)

Step 1: Remove the bracket mounting screws on the fixture and run the wires through the bracket.

(Figure 1)

Step 2: Install the bracket on the fixture. (Figure 2)



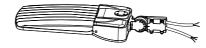


Figure 1

Figure 2

### 2. DIRECT MOUNTING (DM)

Step 1: Remove the bracket mounting screws on the fixture, open the side lid of bracket and run the wires through the bracket. (Figure 3)

Step 2: Install the bracket on the fixture, then cover the side lid and tighten it . (Figure 4)

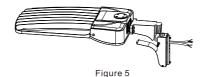




Figure 4

### 3. DIRECT MOUNTING (DM1)

Step 1: Pass the input wire through the bracket, then fix the fixing plate on the housing. (Figure 5) Step 2:Fit the light with fixing plate and the bracket by top-down, then tighten the top screw to complete the installation.(Figure 6)



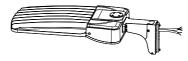


Figure 6

#### 4. YOKE MOUNTING (YM)

Step 1: Remove the bracket mounting screws on the fixture and run the wires through the bracket. (Figure 7)

Step 2: Install the bracket on the fixture. (Figure 8)



#### 5. ADJUSTABLE FITTER MOUNTING & DIRECT MOUNTING (A&D)

Step 1: Remove the bracket mounting screws on the fixture, open the side lid of bracket and run the wires through the bracket. (Figure 9)

Step 2: Install the bracket on the fixture, then cover the side lid and tighten it . (Figure 10)





Figure 9

Figure 10

# **ProLED**. SekTor Area Installation Instructions




Figure 12

### 6.FLOOD MOUNTING (FM)

Installation of LED Lamps:

Step 1: First install two big screwst. (Figure 11)

Step 2: Install two small screws . (Figure 12)

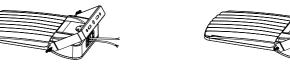


### 1. ADJUSTABLE FITTER MOUNTING (AM)

Figure 11

Step 1: Loosen the four bolts on AM bracket, connect the wires correctly, and pull the wires into the poles. (Figure 13)

Step 2: Place the bracket into the pole and lock the four bolts. (Figure 14)

Notice: Adjustable angle is 0-90° (Figure 13).

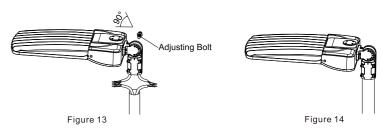


### 2. DIRECT MOUNTING (DM)

Step 1: Fix DM bracket to square pole with bolt, open the side lid of DM bracket, pull the wire into junction box, and connect the wire correctly. (Figure 15)

Step 2: Put the connected wire into the junction box, then cover the junction box. (Figure 16) Notice: Adjustable angle is 0-30° (Figure 15).

Same as round pole installation, please remember to remove the silicon plate when install the fixture in round pole (Figure 17)

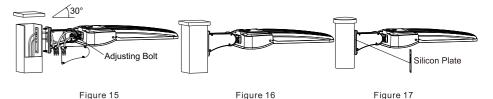

3. DIRECT MOUNTING (DM1)

Step 1: Fix the mounting base on the square pole with screws, meanwhile pull out the wire through the bracket. (Figure 18)

Step 2: Then fit the light with fixing plate and the bracket top-down, and tighten the top screw to complete the installation. (Figure 19)

Step 3: Connect the wires correctly, then fasten the cover bottom-up to complete the installation.

Same as round pole installation, please remember to remove the silicon plate when install the fixture in round pole (Figure 21)  $\,$ 

-2-




## ProLED. SekTor Area Installation Instructions







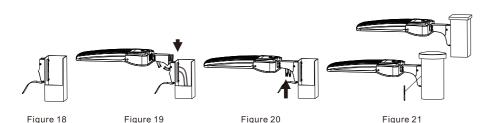

### 4. ADJUSTABLE FITTER MOUNTING & DIRECT MOUNTING (A&D)

#### 4.1 ADJUSTABLE FITTER MOUNTING

- Step 1: Remove the spare parts from A&D bracket. (Figure 22)
- Step 2: Loosen the four bolts on A&D bracket, connect the wires correctly, and pull the wires into the poles.(Figure 23)
- Step 3: Place the bracket into the pole and lock the four bolts. (Figure 23)

Notice: Adjustable angle is 0-90° (Figure 23)



Figure 23

Figure 22

### **4.2 DIRECT MOUNTING**

- Step 1: Remove the four bolts from A&D bracket, remove the four rubber plugs from installation bar, put the four rubber plugs on the place where the four bolts were previously placed on the bracket for waterproof purpose(Figure 24)
- Step 2: Fix A&D bracket to square pole with bolt, open the cover of A&D bracket junction box, pull the wire into bracket junction box, connect the wire properly and cover the junction box.

Notice: Adjustable angle is 0-90°. (Figure 25)

Same as round pole installation, please remember to use the adapting plate for round pole installation(Figure 26)

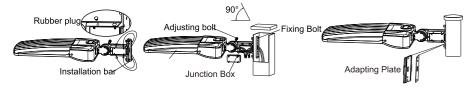


Figure 24

Figure 25

Figure 26

### 5. YOKE MOUNTING (YM)

- Step 1: Drill holes on the wall as shown. (Figure 27)
- Step 2: Knock the expansion bolts into the wall. (Figure 28)
- Step 3: Connect the fixture to the bracket and tighten the screws; connect the wires properly and put them into junction box. (Figure 29)

Notice: Adjustable angle is 0-90° (Figure 29)



Figure 27

· @ . Expansion Bolt


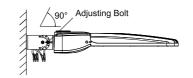


Figure 28

Figure 29

### 6. FLOOD MOUNTING (FM)

Step 1: Install the mount to the fixture, tighten the mount and install the screws. (Figure 30) Step 2:Connect the fixture to the bracket and tighten the screws; connect the wires properly and put them into junction box(Figure 31)

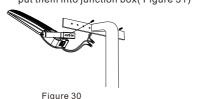




### The explanation for wattage selection:

The light fixture with watt adjustable function, tear off the plug, switch it to the tap position you need

Note: only switch the tap position to "III", the light fixture recover to the standard status.

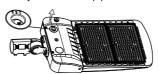


MODEL	I	II	III
150	100W	120W	150W
300	200W	240W	300W

Figure 32

Factory setting:"III'

### Instructions for Photocell

When the photocell function is requird, photocell should be installed on the back of lamp; When it's not required shorting cap should be installed on the back of lamp (Figure 33)

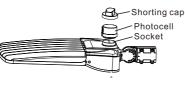

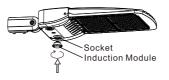


Figure 33

Figure 34

#### Instructions for AC Sensor

For products with AC PIR or motion sensor function, the induction module should be installed on the socket of the sensor. (Figure 34)

- Step 1: Adjust the induction module to align the arrows above. (Figure 35)
- Step 2: Insert the induction module into the sensor socket. Note that the direction should be aligned as shown.(Figure 36)
- Step 3: Turn the induction module clockwise until it is tight. (Figure 34)



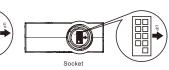


Figure 35

Figure 36

#### Instructions for DC Sensor

For products with DC PIR or motion sensor function, the induction module should be installed into the mounting hole on the cover.

Step 1: Remove the plug in the mounting hole with screwdriver. (Figure 37)

Step 2: Insert the induction module into the mounting hole. (Figure 38)

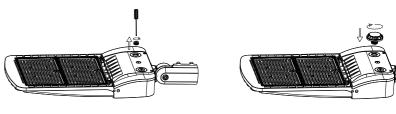


Figure 37

Figure 38

#### MIN 75 °C SUPPLY CONDUCTORS

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### LES FILS D'ALIMENTATION 75 °C MIN

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.