

## MaxLite® GuardMax Small Profile Wall Pack



### General Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For Residential installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- **DO NOT INSTALL DAMAGED PRODUCT!**
- This fixture is intended to be connected to a properly installed and grounded UL listed junction box.
- Consult a qualified electrician to ensure correct branch circuit conductor.



Picture is for illustration purposes only.  
Your model may vary.

#### **WARNING:**

##### **RISK OF ELECTRICAL SHOCK**

- **Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.**
- **Do not install fixture in the rain to reduce risk of electrical shock.**
- **Turn off the power when you perform any maintenance.**
- **Verify that supply voltage is correct by comparing it with the luminaire label information.**
- **Make all electrical and grounded connections in accordance with the National Electrical Code and any applicable local code requirements.**
- **All wiring connections should be capped with UL approved wire connectors.**

#### **CAUTION:**

##### **RISK OF INJURY**

- **Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.**
- **Avoid direct eye exposure to the light source while it is on.**
- **Account for small parts and destroy packing material, as these may be hazardous to children.**

#### **CAUTION:**

##### **RISK OF FIRE**

- **Do not use electric generator to test LED fixture.**
- **Keep combustable and other materials that can burn away from luminaire and lamp/lens**
- **MIN 75°C SUPPLY CONDUCTORS.**

#### **Model:**


**SECS20UCSBPC**  
**SECS26UCSBPC**  
**SECS15UCSBPC**



# MaxLite® GuardMax Small Profile Wall Pack

## 1 - General Wiring Diagram

**CAUTION:** Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.

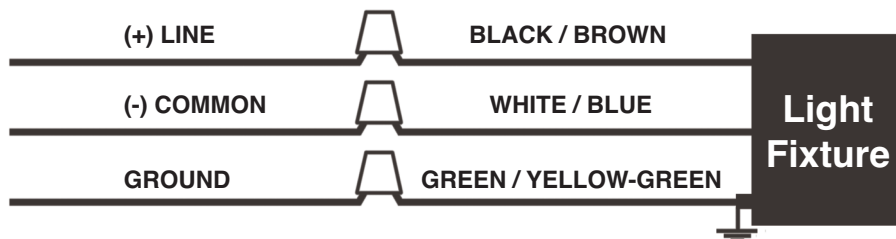


## 2 - Direct J-Box/Wall Installation


*Disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.*

**Note:** There is an “UP” label on the fixture’s backplate to indicate proper orientation.


1. Turn off the power.

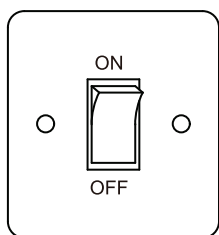


2. Loosen the four screws shown in diagram below.

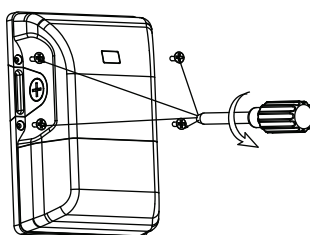


3. Remove the 1/2 end cap.

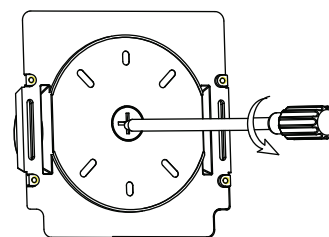


4. Peel off the yellow sticker and apply it to the round area of the bottom plate.

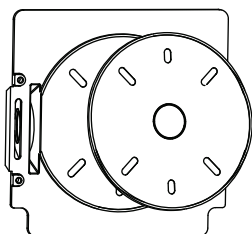


5. Fix the bottom plate to the round plate.

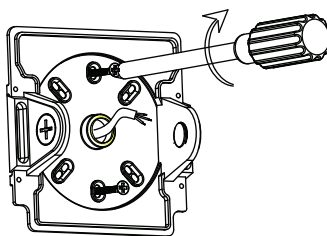


6. Make your wiring connections.

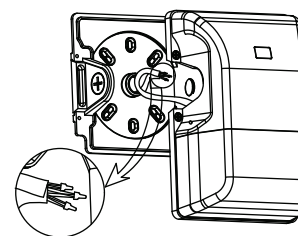


7. If you do not wish to use the photocell, unplug connector located at the top of fixture housing.

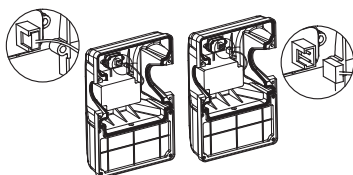

8. Replace bottom plate and tighten the four screws.

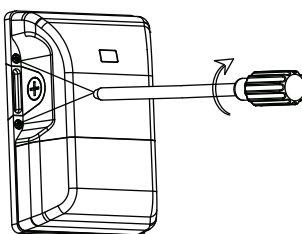

9. Turn on the power after making sure all screws are tightend and the wire connections are properly made.

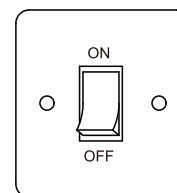




# MaxLite® GuardMax Small Profile Wall Pack

## 3 - Surface Conduit Installation


**Disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

**Note:** There is an “UP” label on the fixture’s backplate to indicate proper orientation.


1. Turn off the power.

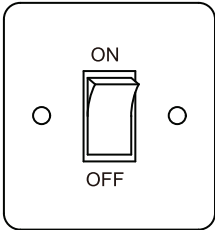


2. Loosen the four screws shown in diagram below.

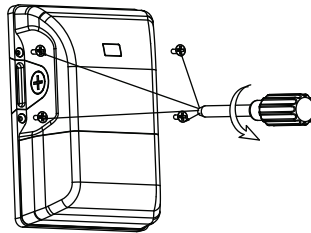


3. Place the black sponge pad on the bottom plate.

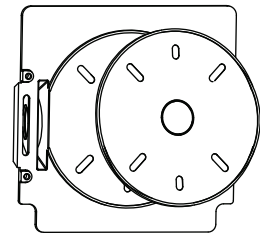


4. Screw the bottom plate into the wall.

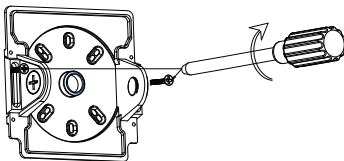


5. Remove one of the 1/2 end caps and pull wires through.

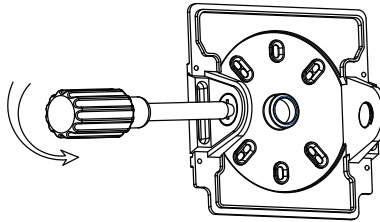


6. Make your wiring connections.

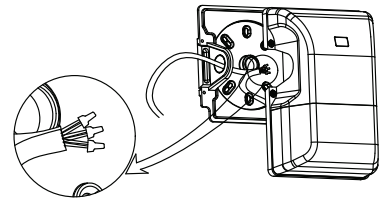


7. If you do not wish to use the photocell, unplug connector located at the top of fixture housing.

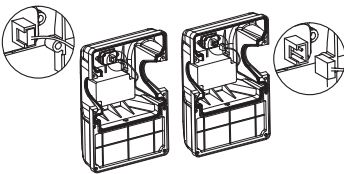


8. Replace bottom plate and tighten the four screws.

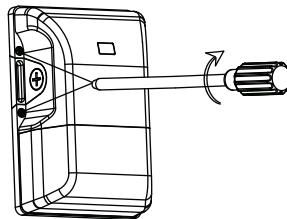

9. Turn on the power after making sure all screws are tightend and the wire connections are properly made.

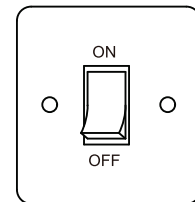

**Note:** Adjust DIP switch on the back of the fixture to select the desired CCT.

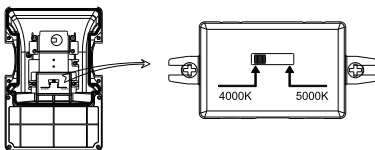

## MaxLite® GuardMax Small Profile Wall Pack



### Warranty Information

MaxLite Inc. warrants its products for a minimum period of **FIVE (5)** years from the earlier of the actual installation date or 90 days after the original date of purchase from a MaxLite authorized distributor/dealer (the “Warranty Period”), as follows: If a Product fails to operate during the Warranty Period as a result of defects in materials or workmanship, MaxLite will, at its option, repair it, replace it with the same or like Product.

Please refer to Maxlite’s website (at <http://maxlite.com/resources/warranties>) for the complete coverage details as well as the terms and conditions of our warranty. Please note that it is NOT a requirement to register your warranty in order to initiate a warranty claim unless a Ten Year warranty has been purchased separately, or when applicable and/or purchased separately, your warranty contains a replacement labor allowance.

### **Limitation of Liability**

THIS WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF MAXLITE SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL MAXLITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, WHETHER OR NOT MAXLITE HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL MAXLITE’S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT (EXCLUDING LABOR WARRANTY COVERAGE WHERE SPECIFICALLY OFFERED BY MAXLITE). WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DONOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; MAXLITE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, such limitation may not apply to you.