FLUX Multifunctional Flood Light 6W 20W **Installation Manual**

SOLTECH Designs and Manufactures Advanced, Solar-Powered LED Technology.



01 Introduction

02 Specification


Thank you for purchasing FLUX Multifunctional Flood Light Products.


Important

Please read these instructions before installation to ensure optimum results and longevity of your lights. The solar panel should be charged in full sunlight for 8 to 9 hours before initial first use to provide optimum results. 2. Please note the lighting run time depends on sunshine duration


Features

- Eliminates trenching, cabling, and electricity costs
- Solar panel bracket is 360 degrees adjustable, and the light module is 270 degrees adjustable. Adjusting the solar panel angle maximizes solar energy collection, and allows snow, dirt, and other debris to slide or wash off
- Large battery capacity of 7,680 mAh enables long run times and high light output
- Wall-mounting and post-mounting accessories available
- The latest advanced Li-ion battery lasts 2000+ charging cycles. • 7 operating modes are programmable via remote control or
- controls on the fixture
- IP66 rated protection from water, dirt, and dust
- The easiest way to bring lighting to any outdoor application
- Photo and motion sensors, wide angle 360° detection, high sensitivity

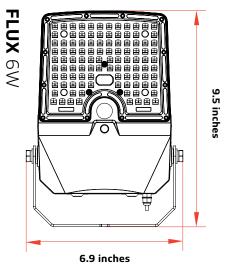

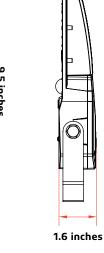

FLUX 20W

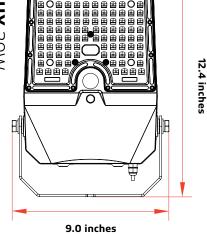





Notice & Warning

- 1. The FLUX will provide optimal performance where there is direct sunshine.
- and weather.
- 3. The fixture will turn on automatically at dusk.
- 4. Built-in intelligent IC provides over-charge, over-discharge, and over-voltage protection.
- 5. Do not disassemble the fixture.
- 6. Do not dispose of the battery with household garbage, to avoid explosion.

Please Note

During continuous rainy or cloudy days, run time may be reduced as the battery will not be fully charged.

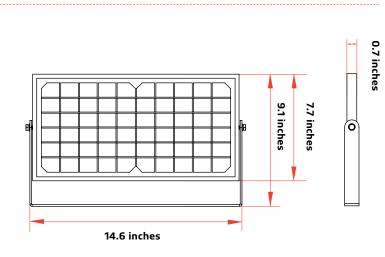

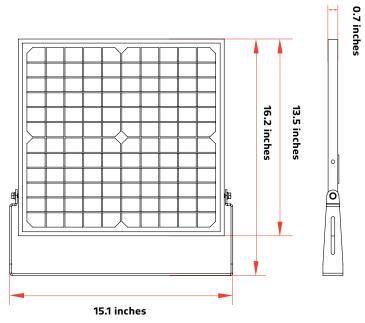

Specifications	FLUX 6W	FLUX 20W
LED Nominal Power	6W	20W
Solar Panel	Mono-Crystalline 10V 10W	Mono-Crystalline 10V 20W
LiFeP0₄ Battery	6.4V 3AH	6.4V 12AH
ССТ	4,000K	4,000K
Lumen Output@4000K	1,020	3,400
CRI	> 70	> 70
Product Size	Light Head 9.5 X 6.9 X 1.6 Inches Solar Panel 7.7 X 14.6 X 0.7 Inches	Light Head 12.4 X 9.0 X 2.3 Inches Solar Panel 13.5 X 15.1 X 0.7 Inches
Beam Spread	>130°, NEMA type 7 Very Wide	>130°, NEMA type 7 Very Wide
ЕРА	1.41	2.51
EPA Cable Length	1.41 16.5 ft	2.51 16.5 ft
Cable Length	16.5 ft	16.5 ft
Cable Length IP Rating	16.5 ft IP66	16.5 ft IP66
Cable Length IP Rating Casting	16.5 ft IP66 PC & Aluminum	16.5 ft IP66 PC & Aluminum
Cable Length IP Rating Casting Efficiency@4000K	16.5 ft IP66 PC & Aluminum 170 lm/W	16.5 ft IP66 PC & Aluminum 170 lm/W
Cable Length IP Rating Casting Efficiency@4000K * Charging Time	16.5 ft IP66 PC & Aluminum 170 lm/W 6hrs (1000W/m²)	16.5 ft IP66 PC & Aluminum 170 lm/W 6hrs (1000W/m²)
Cable Length IP Rating Casting Efficiency@4000K * Charging Time Run Time (@Full Charged)	16.5 ft IP66 PC & Aluminum 170 lm/W 6hrs (1000W/m²) 5–7 Rainy Days	16.5 ft IP66 PC & Aluminum 170 lm/W 6hrs (1000W/m²) 5–7 Rainy Days
Cable Length IP Rating Casting Efficiency@4000K * Charging Time Run Time (@Full Charged) Operation Mode	16.5 ft IP66 PC & Aluminum 170 lm/W 6hrs (1000W/m²) 5–7 Rainy Days 7 Operating Modes	16.5 ftIP66PC & Aluminum170 lm/W6hrs (1000W/m²)5-7 Rainy Days7 Operating Modes


* The temperature can impact the battery's charge and daily operation.

* The solar charge data is base on 77 degree F ambient temperature with the panel facing direct solar radiation. The standard radiation value is 1000W/m².

03 Installation

WALL MOUNT

POLE MOUNT

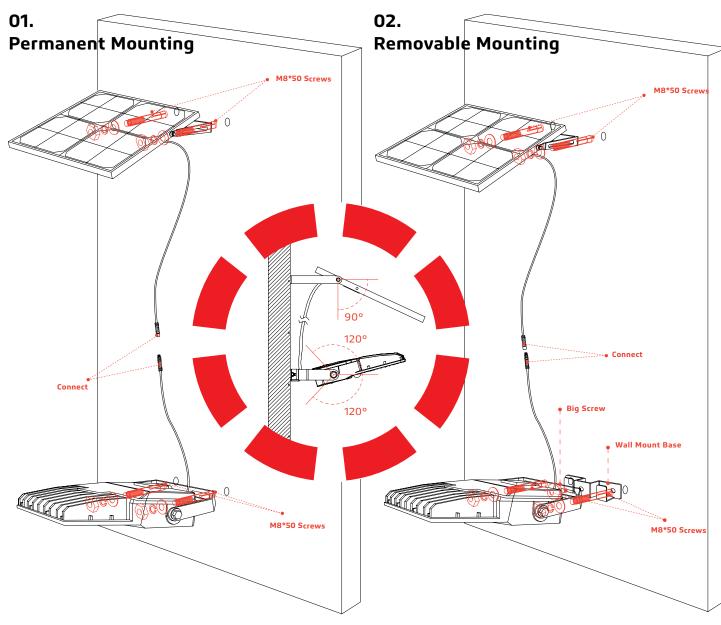

Connect M8*60 Screws .

First mount the solar panel:

- 1. Drill two holes into the wall surface then use the screw kit to secure the solar panel bracket on the wall.
- 2.After you secure the solar panel bracket, attach the solar panel to the bracket.

Then mount the fixture:


- 3. Drill two holes into the wall surface. Attach the bracket to the fixture then secure to the wall surface with the screw kit.
- 4. Connect the light and solar panel cables.

- First mount the solar panel: 1. Drill two holes into the wall surface, then use the screw kit to secure the solar panel bracket on the wall.
- 2. After you secure the solar panel bracket, attach the solar panel to the bracket.

Then mount the fixture:

- 3. Drill two holes into the wall surface, then screw in the wall mount base to the wall.
- 4. Attach the bracket to the fixture and then hang the bracket on the wall mount base. Lastly, use the big screw nob to hold them together. 5. Connect the light and solar panel cables.


Check List

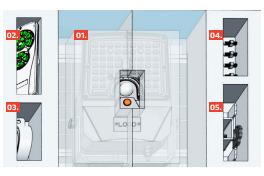

FLUX 6W 01. Fixture 03. Pole Mount 02. Remote Control 04. Screw Kit (*M8*60 X 4*, *M8*50 X 4*)

05. Wall Mount Base

• M8*60 Screws

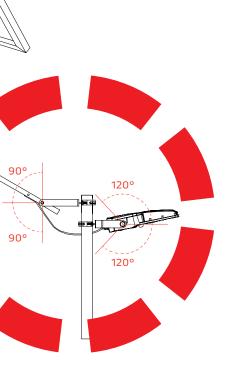

First, mount the solar panel to the pole:

- 1. Use the screw kit to secure the pole mount base and the solar panel bracket to the pole.
- 2. Then attach the solar panel to the bracket.
- Then, mount the fixture:
- 3. Attach the bracket to the fixture.
- 4. Use the screw kit to secure the fixture bracket to the pole mount base on the pole.
- 5. Connect the light and solar panel cables.



FLUX 20W 01. Fixture

03. Pole Mount 02. Remote Control 04. Screw Kit (*M8*60 X 4*, *M8*50 X 4*) 05. Wall Mount Base

04 **Remote Control**

MOTION SENSOR MODES



Light on 100% if motion is detected, stand-by period is 60 seconds. Light will turn off when no motion is detected.




Light on 100% if motion is detected, stand-by period is 60 seconds. Light will dim down to 5% output when no motion is detected.





Light on 100% if motion is detected, stand-by period is 120 seconds. Light will turn off when no motion is detected.

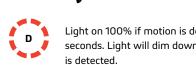


60


Light on 100% if motion is detected, stand-by period is 120 seconds. Light will dim down to 5% output when no motion





REMOTE CONTROL INSTRUCTIONS

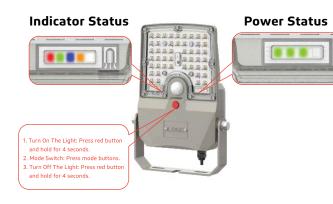

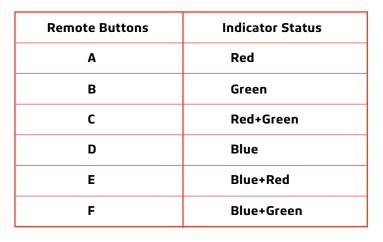






1. The flood lights "Turn On" time depends on the client's local time (Turn-on Light Level:< 20Lux).

2. A, B, C, D, E and F modes have memory functions. For example, if you press mode A and then press the OFF button, Mode A will still be activated when you turn the light on again until end user resets the mode.



Light on 50% for 3 hours (Sensor disabled), then returns to motion sensor mode. If motion detected, stand-by period is 60 seconds. Light will turn off when no motion is detected.

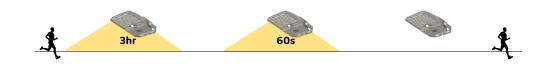





Light on 50% for 3 hours (Sensor disabled), then returns to motion sensor mode. If motion detected, stand-by period is 60 seconds. Light will dim down to 5% output when no motion is detected.






Light on 50% for 2 hours, then dims down to 20% for 6 hours, then dims down to 10% untill dawn (Sensor disabled).

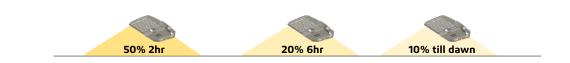

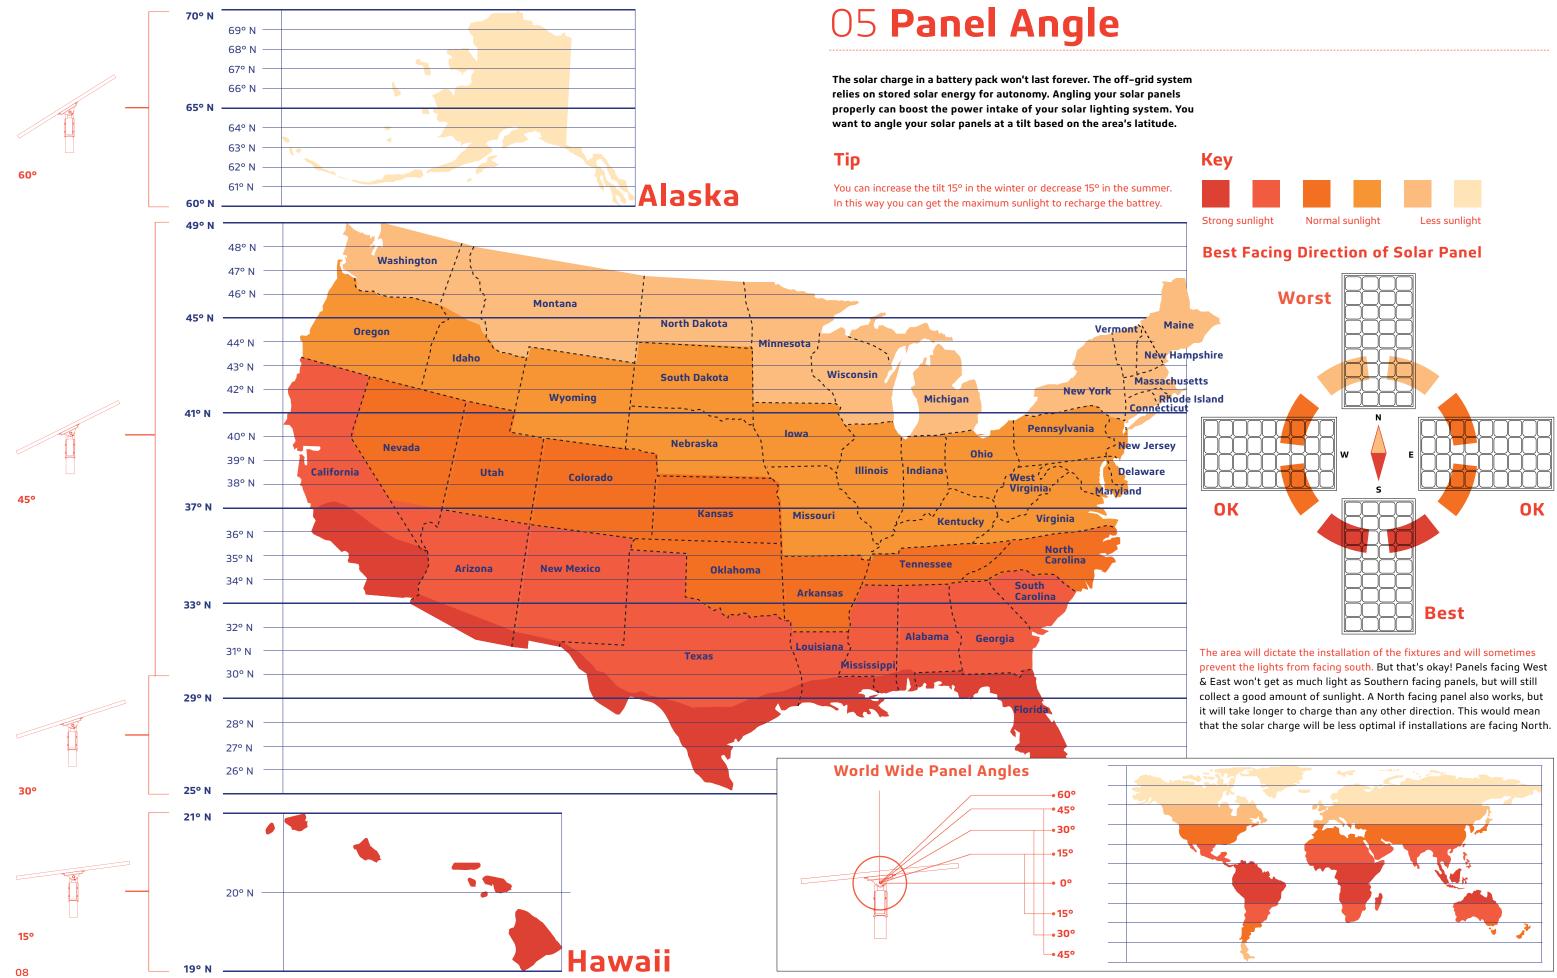


06 IES Light Distribution

FLUX 6W

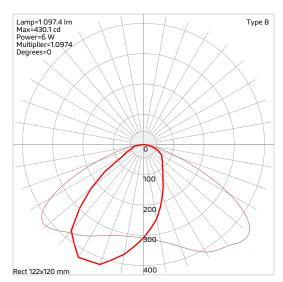

FLUX 20W

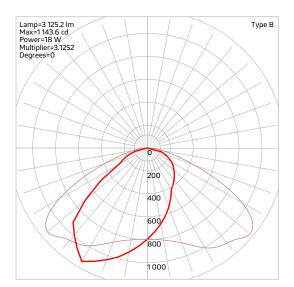

07 Warranty

FLUX is covered by a 3 year limited warranty. SOLTECH urban light warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 3 years from date of purchase. To obtain warranty service please contact your local distributor or sales rep for further instruction.

SOLTECH Designs and Manufactures Advanced, Solar-Powered LED Technology.



1460 Park Avenue. Emervville. CA 94608 USA

www.soltechlighting.com

SOLTECH LLC reserves the right to update all product data sheets at any time. Consult SOLTECH marketing specialists for publication updates at hello@soltechlighting.com

Copyright©2022-2023 SOLTECH LLC, All Rights Reserved.